

# Installation ring



The installation ring is used for installing sprinklers in, for example, aluminium irrigation lines. Screwing the sprinkler into this ring causes the ring to expand and to be clamped firmly in the drilled hole. This ring can also offer a solution when the screw thread of the sprinkler in the irrigation line is damaged.

## APPLICATION

Installation of sprinklers in irrigation lines

## CHARACTERISTICS

- ✔ Installation in 32 mm aluminium irrigation lines
- ✔ For repair of 32 mm PVC lines in which the screw thread is damaged

## TECHNICAL DATA

Hole diameter	: 11.5 mm
Working pressure	: up to 2.0 bar
Material	: soft PVC
Connection	: 3/8 WW

## Dimensions (mm)

