



GF Piping Systems


iJOINT

tips for a correct installation



**Insert the pipe until the pipe stop
(mark the insertion length on the pipe to be
sure that you have passed the gasket)**

+GF+

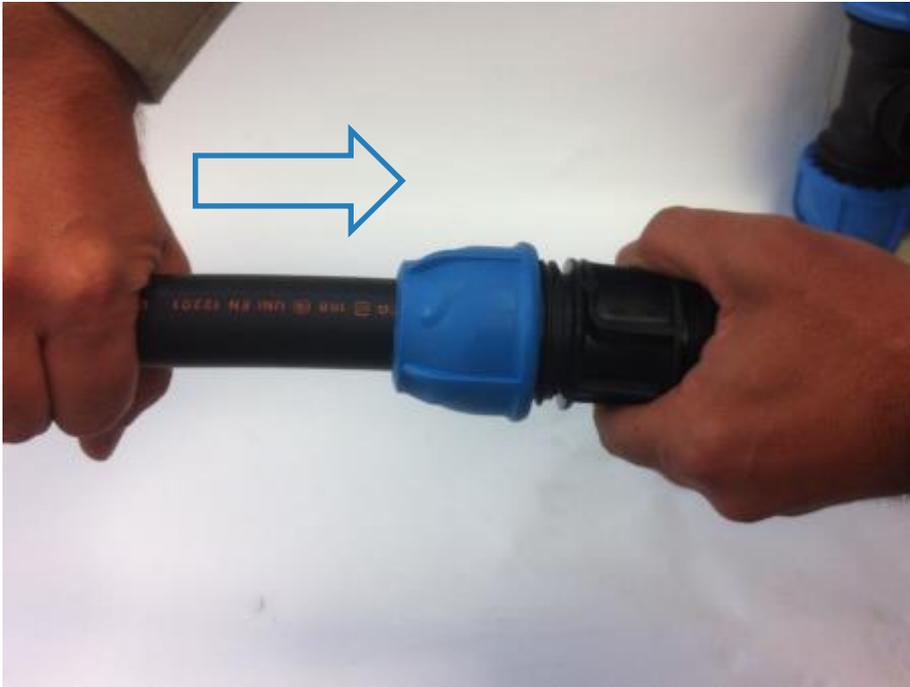

**Tighten the nut as much as possible.
From d. 40 it's necessary to tighten
with a wrench**



D. 20 – 25- 32 mm

By hand ok, with the wrench bettero



D. 40 mm bis 110 mm

BHy hand is not enough



D. 40 mm bis 110 mm

**Tighten with 2 wrenches to avoid the
untightening of the other nut**



DO NOT disassemble the fitting

+GF+



ASSEMBLY MISTAKES

The thrust ring is not fixed correctly into the body



ASSEMBLY MISTAKES

The grip ring has to be locked into the thrusting



